



## LED Reference Guide

**Flashing RED and BLUE:** Initializing sensors. *Hold still and level.*

**Flashing BLUE:** Disarmed, no GPS lock found

**Solid BLUE:** Armed with no GPS lock

**Flashing GREEN:** Disarmed, GPS lock acquired

**Solid GREEN:** Armed, GPS lock acquired

**Double flashing YELLOW:** Failing pre-arm checks

**Single Flashing YELLOW:** Radio failsafe activated

**Single Flashing YELLOW with quick beeping tone:** Battery failsafe activated

**Flashing BLUE and YELLOW with tone:** GPS glitch or GPS failsafe activated

**Flashing RED and YELLOW with rising tone:** EKF or Inertial Nav failure

**Flashing PURPLE and YELLOW:** Barometer glitch

**Solid RED:** Error

**Solid RED with SOS tone:** SD Card missing (*or other SD error like bad format etc.*)